# THREADING THE MACHINE

NOTE: IF YOUR MACHINE IS NOT THREADED CORRECTLY, IT WILL NOT SEW PROPERLY.

Turn the hand wheel toward you until the needle is raised to its highest position. Place a spool of thread on the spool pin, located on the back or rear of the arm. See Fig. 9 for the following letters:

1. Pass the thread through the back thread guide (A). Bring the thread over the arm and through the front thread guide B.
2. Draw the thread downwards to, and around between the tension discs (C), from right to left.
3. Now place the thread on the guide notch (D) at the top of the tension dial.
4. Bring the thread back down and under the check spring (E) and up through the large hook (F).
5. Pass the thread through the hole at the end of the take-up lever (G) from right to left.
6. Draw the thread down through the large hook (F), the thread guide (H) and the needle clamp guide (I).
7. Now pass the thread through the eye of the needle from left to right. Draw about 3 inches of thread through the eye of the needle. This is the length necessary to begin sewing.

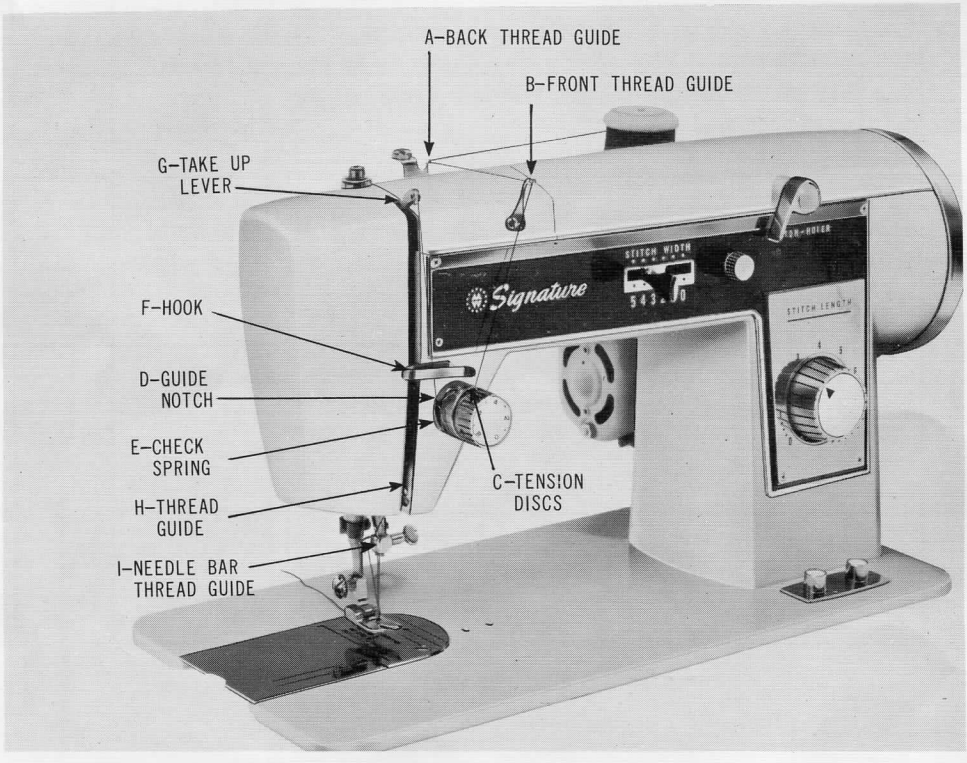


**Fig. 9. Upper Threading**